



## Installation Guide

### UTV Floor Mats

**Parts:**

(2) Floor Mats (4) for Crew  
6 Self Tapping Screws per Mat

**Tools Needed:**

Drill with bits  
Power Screwdriver with Philips Head bit  
Marker


**Installation:**

DiamondBack Floor Mats can be installed using factory screw holes OR self tapping screws. When possible use factory Screw holes as shown in figures 1, 2, and 3.

1. Locate possible screw locations in floor of UTV and measure locations.
2. Place floor mat onto floor and mark factory screw locations.
3. Drill holes in aluminum floor mat to line up with factory screw holes.
4. Remove factory screws then insert floor mat and replace screws through the holes in the mat.
5. If no factory screw holes will align, use self tapping screws provided to affix the UTV floor mats.



**Step 1**

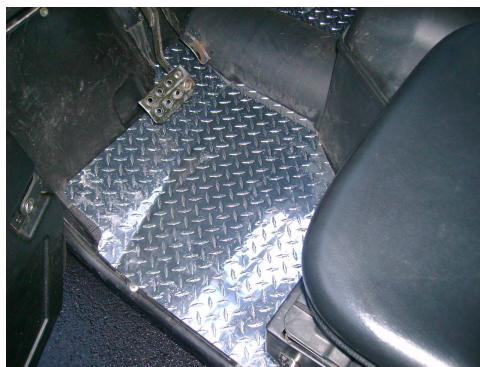

**Step 2**



**Step 3-4**